

Firmware Installation Procedure

Notice: Do not turn off the power of the instrument or remove the USB memory during this operation.

1 Download the firmware

- 1) Download the Zip file to the computer.
- 2) Connect the USB memory to your computer.
- 3) Extract the *.prg file and copy it to the root directory of your USB memory.

2 Connect the USB memory to the instrument

Connect the USB memory containing the downloaded files into the USB TO DEVICE terminal of the instrument.

Notice: Make sure that the USB memory is properly connected to the terminal.
Excessive force or incorrect insertion may damage the terminal.

3 Install the firmware

- 1) Hold down STYLE CONTROL [START/STOP] button on the panel and turn the power on simultaneously.

 
[START/STOP] button




Power on button




- 2) Keep holding down the [START/STOP] button until the following message appears:

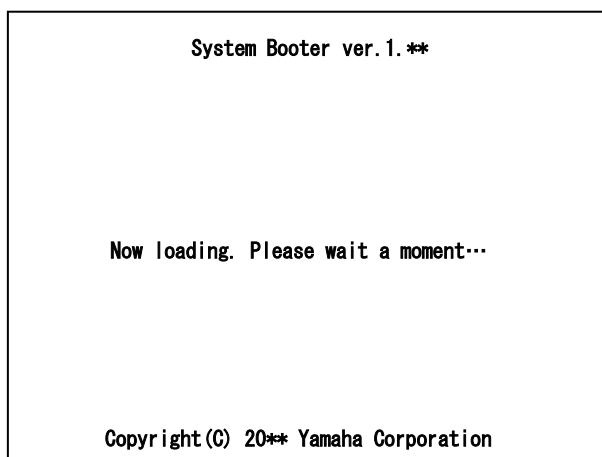

 
- 3) When the following message appears after a few moments, press the [START/STOP] button.

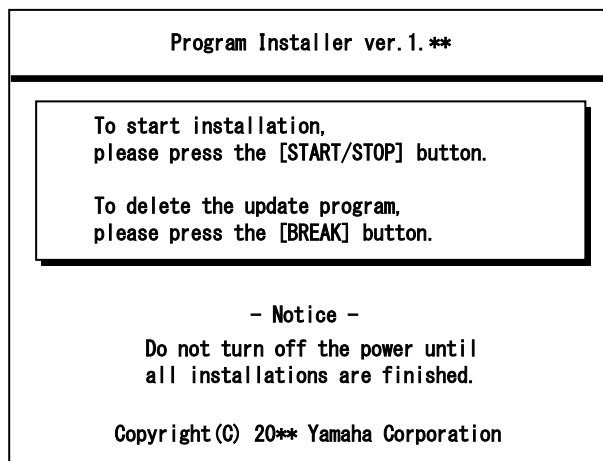

 - 4) When the following message appears, press the [START/STOP] button to start firmware installation. A progress bar for installation will appear.

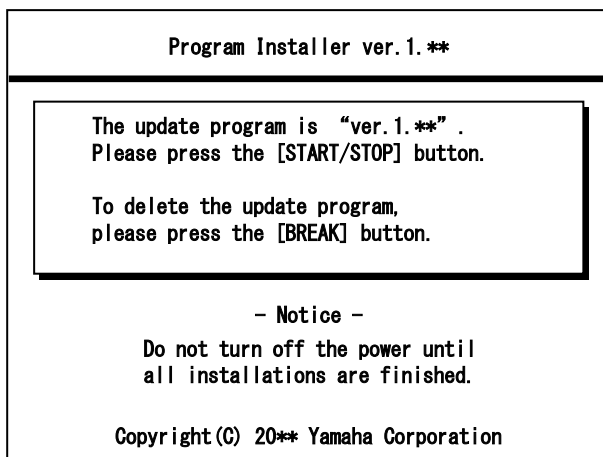

 - 5) When firmware installation is complete, the following message appears with the new firmware version. Press the power button on the instrument to turn it off.

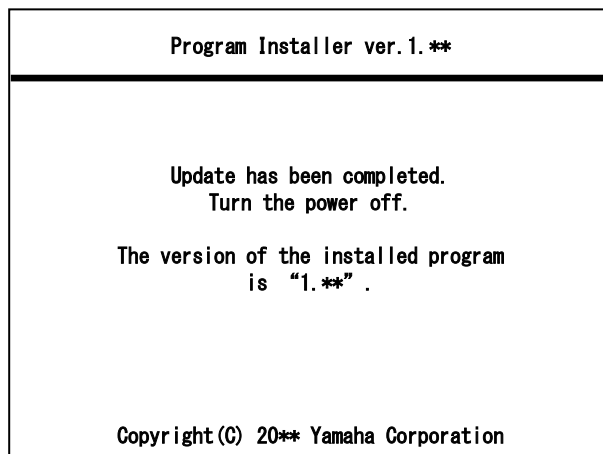

Confirm the version number

PSR-S670

- 1) Turn the instrument on and wait until the main display appears.
- 2) Press the [FUNCTION] button, select [SYSTEM], and then go to the [OWNER] tab.
- 3) Press the [7 ▲] or [8 ▲] button.
- 4) Check that the version number is correct for the upgrade.
- 5) Press the [8 ▲] (EXIT) button or the [EXIT] button to close the windows.

Troubleshooting

1) The power supply was cut off or the USB memory was removed during operation.

A complete reinstall is necessary. Perform the operation again from the beginning.

2) The installation cannot be executed and an error message appears in the display.

Check the following:

- ✓ Is the USB memory inserted correctly?
- ✓ Is the USB connector free from dust or dirt?
- ✓ Is all required data located in the root directory of USB memory?
- ✓ Is the USB memory or the upgrade data itself damaged in some way?
- ✓ Does the data correspond to the instrument?

Try installing it again by using another USB memory.