

YDP-S51 快速操作指南

按住 [DEMO/SONG] 或 [PIANO/VOICE] 按鍵時，按下下述任一個反灰的琴鍵可選擇一首示範樂曲或設定參數。（請參考下述 **1 2** 圖示）。

1



快速播放												示範樂曲												50首內建樂曲(50 great for the Piano)																				從電腦下載的樂曲資料																																					
Off	On											Grand Piano 1	Grand Piano 2	Grand Piano 3	E.Piano 1	E.Piano 2	Harpischord	Pipe Organ	Vibraphone	Jazz Organ	Strings	Song No. 1	Song No. 2	Song No. 3	Song No. 4	Song No. 5	Song No. 6	Song No. 7	Song No. 8	Song No. 9	Song No. 10	Song No. 11	Song No. 12	Song No. 13	Song No. 14	Song No. 15	Song No. 16	Song No. 17	Song No. 18	Song No. 19	Song No. 20	Song No. 21	Song No. 22	Song No. 23	Song No. 24	Song No. 25	Song No. 26	Song No. 27	Song No. 28	Song No. 29	Song No. 30	Song No. 31	Song No. 32	Song No. 33	Song No. 34	Song No. 35	Song No. 36	Song No. 37	Song No. 38	Song No. 39	Song No. 40	Song No. 41	Song No. 42	Song No. 43	Song No. 44	Song No. 45	Song No. 46	Song No. 47	Song No. 48	Song No. 49	Song No. 50	1st song	2nd song	3rd song	4th song	5th song	6th song	7th song	8th song	9th song	10th song
A#-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																														


2



I.A.C.深度												音色												殘響種類		延音迴響		殘響深度												八度轉換 (Dual/Duo模式)					音量平衡(Dual/Duo模式)					觸鍵感應																			
-3	-1	0	+2	+3	Off	On						Grand Piano 1	Grand Piano 2	Grand Piano 3	E.Piano 1	E.Piano 2	Harpischord	Pipe Organ	Vibraphone	Jazz Organ	Strings	Room	Hall 1	Hall 2	Stage	Off	Off	On			0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		-1 (Voice 1)	+1 (Voice 1)	0 (Voice 2)	+1 (Voice 2)	-5	-4	-3	-2	-1	0	+2	+4	+5	+6	Fixed	Medium	Hard
A#-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																		

3

按下[PIANO/VOICE] 按鍵時，同時按住[+R] 及[-L] 按鍵來開啟或關閉Duo。

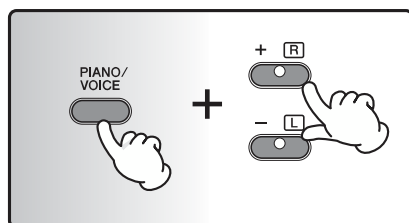

YDP-S51 快速操作指南

4 按住[METRONOME]按鍵時，再按下下述任一一個反灰琴鍵可設定參數。

METRONOME +

節拍器音量

節拍器拍子

速度(節拍器, 樂曲, 等)

A#-1 A-1 B-1 C0 C#0 D#0 E0 F0 G#0 A#0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

0 2 3 4 5 6

數字鍵 0 數字鍵 1 數字鍵 2 數字鍵 3 數字鍵 4 數字鍵 5 數字鍵 6 數字鍵 7 數字鍵 8 數字鍵 9 一次降低 1 拍 一次增加 1 拍 一次降低 10 拍 一次增加 10 拍

5 按住[DEMO/SONG]及[PIANO/VOICE]按鍵時，再按下下述任一一個反灰的琴鍵可設定參數。

DEMO/SONG + **PIANO/VOICE**

自動開機

近端控制

程式變更

控制變更

樂曲播放軌

微調

MIDI傳送音軌

移調

MIDI接收音軌

A#-1 A-1 B-1 C0 C#0 D#0 E0 F0 G#0 A#0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

442.0 Hz

音軌 1 音軌 2 音軌 3 音軌 4 音軌 5 音軌 6 音軌 7 音軌 8 音軌 9 音軌 10 音軌 11 音軌 12 音軌 13 音軌 14 音軌 15 音軌 16 off

-6 -5 -4 -3 -2 -1 0 (標準音高) +1 +2 +3 +4 +5 +6

音軌 1 音軌 2 音軌 3 音軌 4 音軌 5 音軌 6 音軌 7 音軌 8 音軌 9 音軌 10 音軌 11 音軌 12 音軌 13 音軌 14 音軌 15 音軌 16 All

關閉 開啟

On / Off On / Off

All 音軌 1+2

6 按住[DEMO/SONG]及[PIANO/VOICE]按鍵時，如下圖分別或同時按下[+R] [-L]按鍵可微調樂器音高。

調高 (以約0.2Hz為單位) :

DEMO/SONG + **PIANO/VOICE** + **+ R**

調低 (以約0.2Hz為單位) :

DEMO/SONG + **PIANO/VOICE** + **- L**

原廠設定音高 : 440.0Hz

DEMO/SONG + **PIANO/VOICE** + **+ R** / **- L**