NATURAL SOUND SPEAKER SYSTEM

NX-A02 owner's manual

English

Caution: Read this before operating your unit.

To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.

- 1 Install this unit in a well ventilated, cool, dry, clean place away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold. (Do not use/keep this unit in a car etc.)
- Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.

 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.

 Avoid installing this unit where foreign objects may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing.
- On the top of this unit, do NOT place
- On the top of this unit, do NOT place:

 Other components, as they may cause damage and/or discoloration on the surface of this unit.

 Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.

 Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.

 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.

Do not plug this unit into an AC wall outlet until all connections are complete. Do not operate this unit upside-down. They may overheat, possibly causing damage Do not use force on switches, knobs, and/or cords.

- When disconnecting the AC adaptor from the wall outlet, grasp the AC adaptor; do not pull the cord.
 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
 Only the voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than that specified.
- 12 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should
- never be opened for any reason.

 13 When not planning to use this unit for long periods of time (i.e. when going on vacation), disconnect the AC adaptor from the AC wall

- 18 Be sure to read the "Troubleshooting" section regarding common operating errors before concluding that the unit is faulty.

 15 Before moving this unit, press δ to set this unit to off, and disconnect the AC adaptor from the wall outlet.

 16 Be sure to use the AC adaptor supplied with this unit. Using an AC adaptor other than the one provided may cause fire or damage to this unit.

 17 Install this unit near the wall outlet and where the AC adaptor can be reached easily.

 18 For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it foresther well write. This initial paper to the product to lightning storm and the lightning and the product of the pr

it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges. This unit features a magnetically shielded design, but there is still a chance that placing it too close to a TV set might impair picture color. Should this happen, move this unit away from the TV set.

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if this unit itself is turned off by φ. This state is called the standby mode. In this state, this unit is designed to consume a very small quantity of power

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if this unit itself is turned off. In this state, this unit is designed to consume a very small quantity of power.

Thank you for selecting this Yamaha product.

Introduction

◆ Real stereo sound

The high quality amplifier, titanium diaphragm and Yamaha's unique SR-Bass technology achieve high quality sound.

◆ PowerStorage™ circuit (High 20 W power)

Yamaha's original power technology enables an impressive 20 W output (Max. Instantaneous Power).

Supplied accessory

AC adaptor (DC 12 V, 1 A) .. x 1 The shape of the adaptor may vary depending on the area where you purchased. MU12-2120100-C5) (Asia model: MU12-2120100-A1) (Taiwan model: 3.5 mm stereo mini plug cable (0.5 m).....

"Swing Radiator BassTM" is a trademark of YAMAHA CORPORATION

PowerStorage™

"PowerStorageTM" is a trademark of YAMAHA CORPORATION.

Using this unit

- 1 Press b to turn this unit on.
- The status indicator (LED) lights up. 2 Start playback of your portable audio
- 3 Adjust the volume level using \(\psi \sigma \).

■ About the status indicator (LED)

LED status

Flashes once

Flashing

Lit

- This unit is a stereo speaker. To enjoy the fine sound balance between right and left, face the Yamaha logo to the listening




• When not using this unit, press o to turn this unit off to save the power.

■ After using this unit

- 1 Stop playback of your portable audio player.
- 2 Press to turn this unit off.

The status indicator (LED) turns off.

Controls and functions

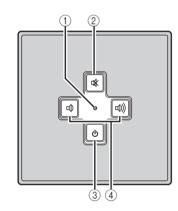

1 Status indicator (LED)

Indicates the current status of this unit. For details, refer to "About the status indicator (LED)".

② ★ (Mute button)

Mutes the sound. To cancel the mute, press ♥ again or \$\psi\$/\$\psi\$). The status indicator flashes during

③ ७ (Power button)

Turns this unit on. Press & again to turn this unit off. When this unit is on, the power indicator lights

④ ₼/₼) (Volume buttons)

Adjust the volume level. Press (4)) to increase the volume level and press of to decrease.

The current status of this unit

This unit is on

This unit is muted.

If the problem you are experiencing is not listed below, set this unit to off, disconnect the AC adaptor, and contact the nearest authorized Yamaha dealer or service center.

Troubleshooting


The volume of this unit is the maximum or minimum

This unit is off, or power supply is not connected.

Problem	Cause	Remedy
No sound.	The connection between this unit and your portable audio player is not correct.	Connect the 3.5 mm stereo mini plug cable properly.
	The volume is set to the minimum.	Increase the volume level.
	This unit is muted.	Cancel the mute.
The volume level is unstable.	The limiter control has been activated due to excessive input.	Decrease the volume level.


Connections

Power supplies

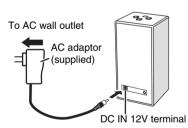

- 1 Connect the supplied AC adaptor to DC IN 12V terminal at the back of this unit.
- 2 Plug the AC adaptor to the AC wall outlet.

Audio inputs

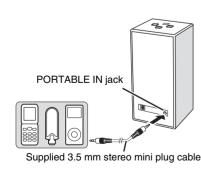

Connect an audio output jack of your portable audio player and the PORTABLE IN jack of this unit using the supplied 3.5 mm stereo mini plug cable.

Before connecting, make sure that this unit is turned off.

Specifications

Speaker type 1-box stereo, Twin SR-Bass Magnetic shielding type	Power supply AC adaptor
Driver	Power consumption
Input (Analog) 3.5 mm Stereo mini jack	Standby power consumption 0.6 W
Dynamic power	Operating environment
Max. instantaneous power*	Temperature+5 to +35 °C
10 W x 2 (1 kHz, 6 Ω, 10% THD)	Dimensions (W x H x D) 84 x 170 x 84 mm
Input sensitivity/Impedance	Weight
Maximum input signal Analog input	*Refers to the power that can be output for 100 ms continuously.
requeste, response	Please note that all specifications are subject to



© 2008 YAMAHA CORPORATION All rights reserved.

Please note that all specifications are subject to

change without notice.

YAMAHA ELECTRONICS CORPORATION, USA 6660 ORANGETHORPE AVE., BUENA PARK, CALIF. 90620, U.S.A.
YAMAHA CANADA MUSIC LTD. 135 MILNER AVE., SCARBOROUGH, ONTARIO MIS 3RI, CANADA
YAMAHA ELECTRONIK EUROPA G.m.b.H. SIEMENSSTR. 22-34, 25462 RELLINGEN BEI HAMBURG, GERMANY
YAMAHA ELECTRONIQUE FRANCE S.A. RUE AMBROISE CROIZAT BP70 CROISSY-BEAUBOURG 77312 MARNE-LA-VALLEE CEDEX02, FRANCE
YAMAHA ELECTRONICS (UK) LTD. YAMAHA HOUSE, 200 RICKMANISWORTH ROAD WATFORD, HERTS WD18 7GQ, ENGLAND
YAMAHA SCANDINAVIA A.B. J A WETTERGRENS GATA 1, BOX 30053, 400 43 VÁSTRA FROUNDA, SWEDON
YAMAHA SCANDINAVIA A.B. J A WETTERGRENS GATA 1, BOX 30053, 400 43 VÁSTRA FIQUIDA, SWEDON
YAMAHA MUSIC AUSTRALIA PTY. LTD. LEVEL 1, 99 QUEENSBRIDGE STREET, SOUTHBANK, VIC 3006, AUSTRALIA