

While holding down the applicable button, press one of the highlighted keys shown below to select a Song or set a parameter.

1 Song playback

Quick Play **Book Select** **Demo Songs** **50 Classics (50 Classical Music Masterpieces) / Lesson Songs**

A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																																
Off	50 Classics	Beyer 1-50	Beyer 51-100	Burgmüller 1-25	Czerny 100, 1-50	Czerny 100, 51-100	Hanon	CFX Grand	Mellow Grand	Pop Grand	Stage E.PIano	DX E.PIano	Harpischord	Vibraphone	Pipe Organ	Jazz Organ	Strings	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7																

50 Classics (50 Classical Music Masterpieces)

1 Canon D dur	11 Salut d'amour op.12	21 Prelude (Wohltemperierte Klavier I No.1)	31 Etude op.10-3 "Chanson de l'adieu"	41 Humoresque
2 Air On the G String	12 From the New World	22 Menuett G dur BWV Anh.114	32 Etude op.10-12 "Revolutionary"	42 Arietta
3 Jesus, Joy of Man's Desiring	13 Sicilienne	23 Piano Sonata No.15 K.545 1st mov.	33 Valse op.64-1 "Petit chien"	43 Tango (España)
4 Twinkle, Twinkle, Little Star	14 Clair de lune	24 Turkish March	34 Nocturne op.9-2	44 The Entertainer
5 Piano Sonata op.31-2 "Tempest" 3rd mov.	15 Jupiter (The Planets)	25 Piano Sonata op.13 "Pathétique" 2nd mov.	35 Nocturne KK4a-16/BI 49 [Posth.]	45 Maple Leaf Rag
6 Ode to Joy	16 Menuett (Eine kleine Nachtmusik K.525)	26 Für Elise	36 Träumerei	46 La Fille aux Cheveux de Lin
7 Wiegenlied op.98-2	17 Menuett G dur	27 Piano Sonata op.27-2 "Mondschein" 1st mov.	37 Barcarolle	47 Arabesque No.1
8 Grande Valse Brillante	18 Marcia alla Turca	28 Improptu op.90-2	38 La prière d'une Vierge	48 Cakewalk
9 Polonaise op.53 "Héroïque"	19 Piano Concerto No.1 op.11 2nd mov.	29 Frühlinglied op.62-6	39 Liebesträume No.3	49 Je te veux
10 La Campanella	20 The Nutcracker Medley	30 Fantaisie-Improptu	40 Blumenlied	50 Gymnopédies No.1

Lesson Songs

1-50 Beyer 1-50
1-50 Beyer 51-100
1-6 Beyer 101-106
1-25 Burgmüller 1-25
1-50 Czerny 100, 1-50
1-50 Czerny 100, 51-100
1-30 Czerny 30, 1-30
1-20 Hanon 1-20
21-42 Hanon 1-Variation 1-22

 
2 Voice settings

Voices **Reverb Types** **Reverb Depth** **VRM Lite** **Stereophonic Optimizer** **Duo Type** **Volume Balance (Dual/Duo mode)** **Octave Shift (Dual/Duo mode)** **Touch Sensitivity**

A#-1	C#0	D#0	F#0	G#0	A#0	C#1	D#1	F#1	G#1	A#1	C#2	D#2	F#2	G#2	A#2	C#3	D#3	F#3	G#3	A#3	C#4	D#4	F#4	G#4	A#4	C#5	D#5	F#5	G#5	A#5	C#6	D#6	F#6	G#6	A#6																
						CFX Grand	Mellow Grand	Pop Grand	Stage E.PIano	DX E.PIano	Harpischord	Vibraphone	Pipe Organ	Jazz Organ	Strings	Recital Hall	Concert Hall	Chamber	Club	Off	1 step down	Default setting	1 step up	Off	On	Off	On	Balance	Separate	1 step down	1 step up	Default setting	-1 (Voice 2)	+1 (Voice 2)	-1 (Voice 1)	+1 (Voice 1)	Soft	Hard	Fixed												
A-1	B-1	C0	D0	E0	F0	G0	A0	B0	C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6	D6	E6	F6	G6	A6	B6	C7

ARIUS YDP-165, YDP-145, YDP-S55, YDP-S35 Quick Operation Guide

3 Metronome settings

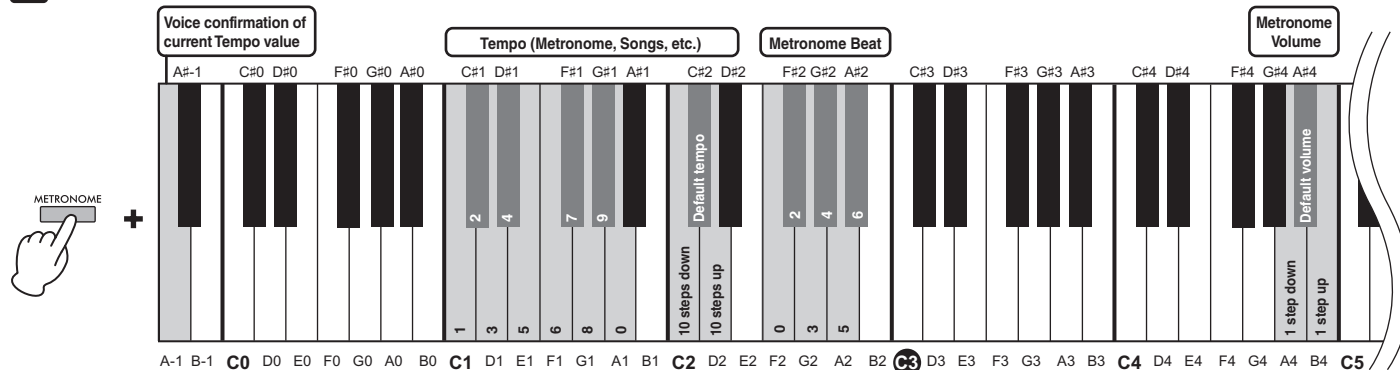

Voice confirmation of current Tempo value

Tempo (Metronome, Songs, etc.)

Metronome Beat

Metronome Volume

METRONOME +

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4

1 2 3 4 5 6 7 8 9 0

 
10 steps down 10 steps up

0 2 3 4 5 6


1 step down 1 step up

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5


To increase the value by 1:



To decrease the value by 1:

 

4 Other settings

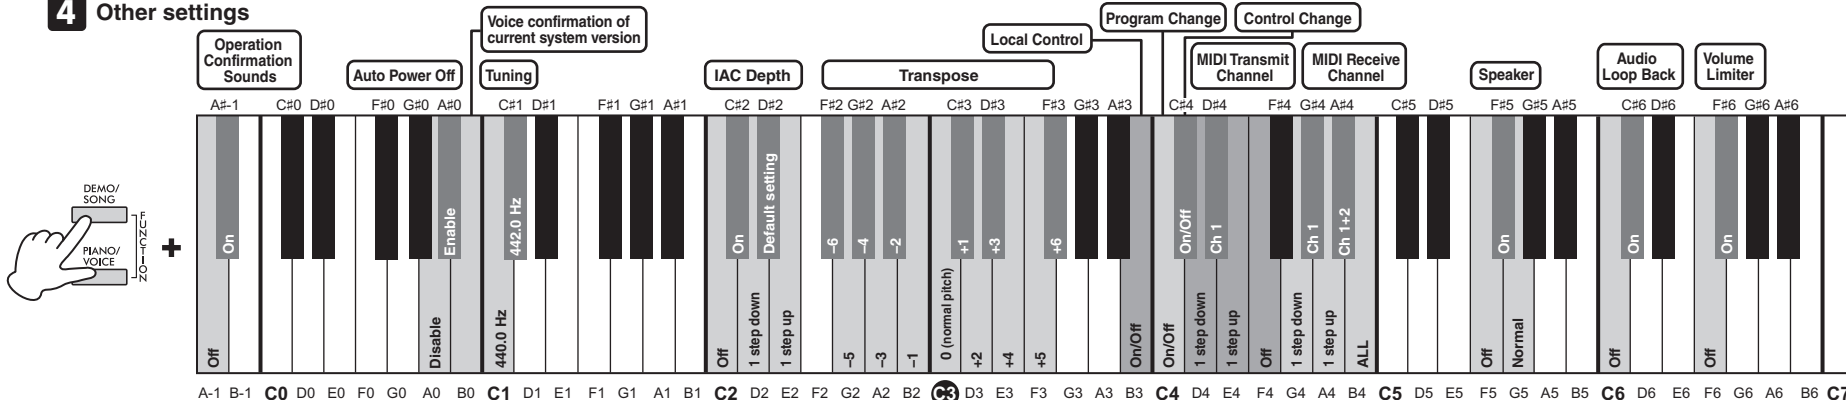 

Operation Confirmation Sounds

Auto Power Off

Voice confirmation of current system version

Tuning

IAC Depth

Transpose

Local Control

Program Change

Control Change

MIDI Transmit Channel

MIDI Receive Channel

Speaker

Audio Loop Back

Volume Limiter

DEMO/SONG +

PIANO/VOICE

Off On

Disable Enable

440.0 Hz 442.0 Hz

Off On

1 step down 1 step up

-6 -4 -2

0 (normal pitch) +1 +3 +5 +6

On/Off

On/Off

1 step down 1 step up

Off

1 step down 1 step up

ALL

Off Normal

Off On

Off On

Off On

 
A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7


5 Tuning settings

While holding down the [DEMO/SONG] and [PIANO/VOICE], use the [+R] and [-L] as shown below to fine-tune the pitch of your instrument.


To tune up (in about 0.2 Hz steps):

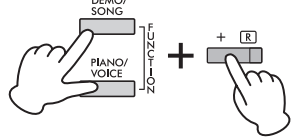

To tune down (in about 0.2 Hz steps):

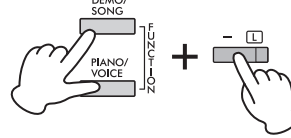 

Default pitch: 440.0 Hz

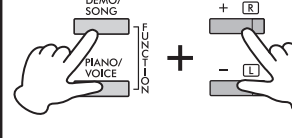 

6 Duo setting

While holding down the [PIANO/VOICE], simultaneously press the [+R] and [-L] to turn Duo on or off.

To turn Duo on or off:

