



# YVC-1000 Block Diagram (Firmware Ver.3.00 or later)

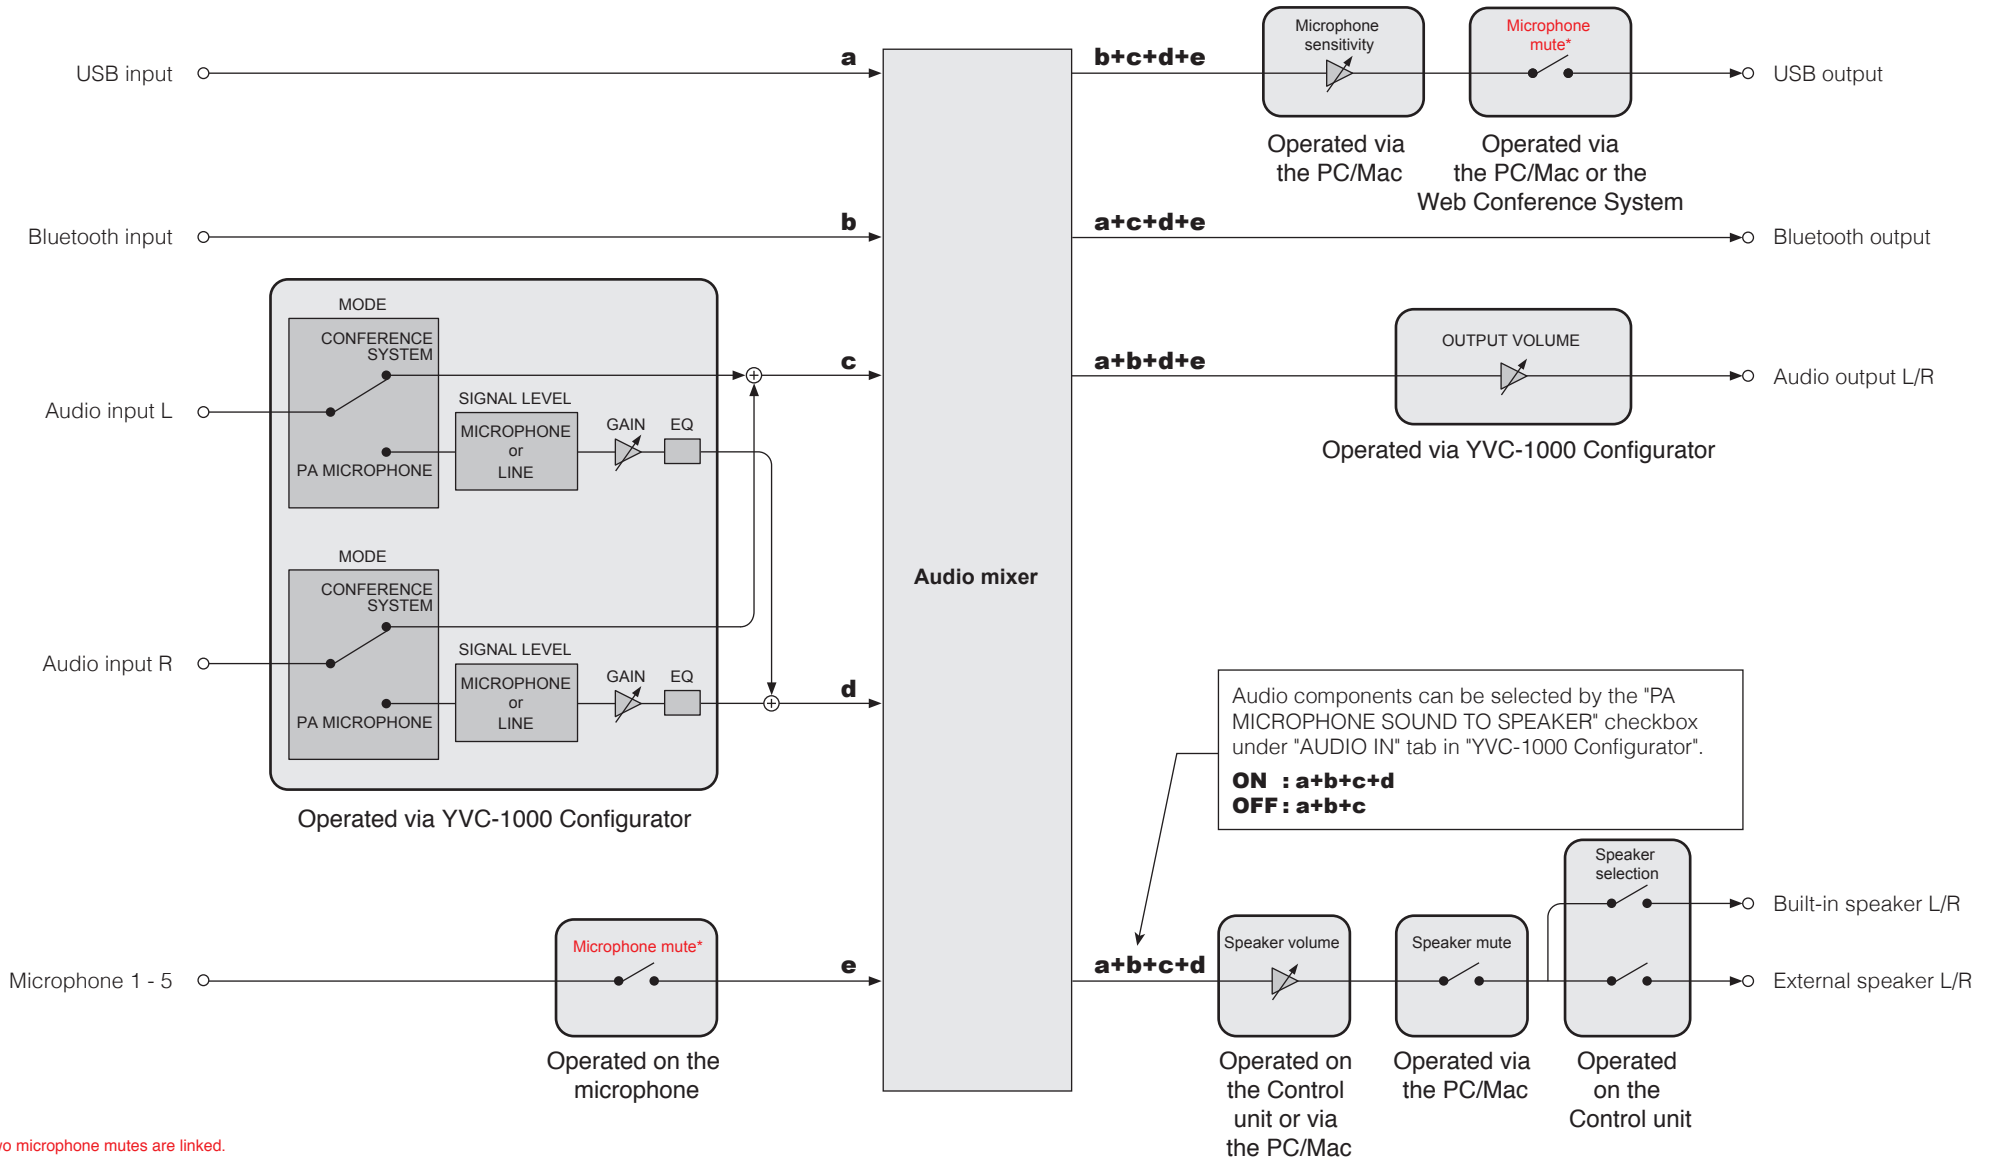


\* The two microphone mutes are linked.  
 You can set whether to link the two microphone mutes or not on the YVC-1000 Configurator (Ver.1.09 or later) (linking is set by default).  
 When non-linking is selected, the system operates the same as with firmware Ver.2.09 to Ver.2.11 (page 2 of this document).

# YVC-1000 Block Diagram (Firmware Ver.2.09 to Ver.2.11)

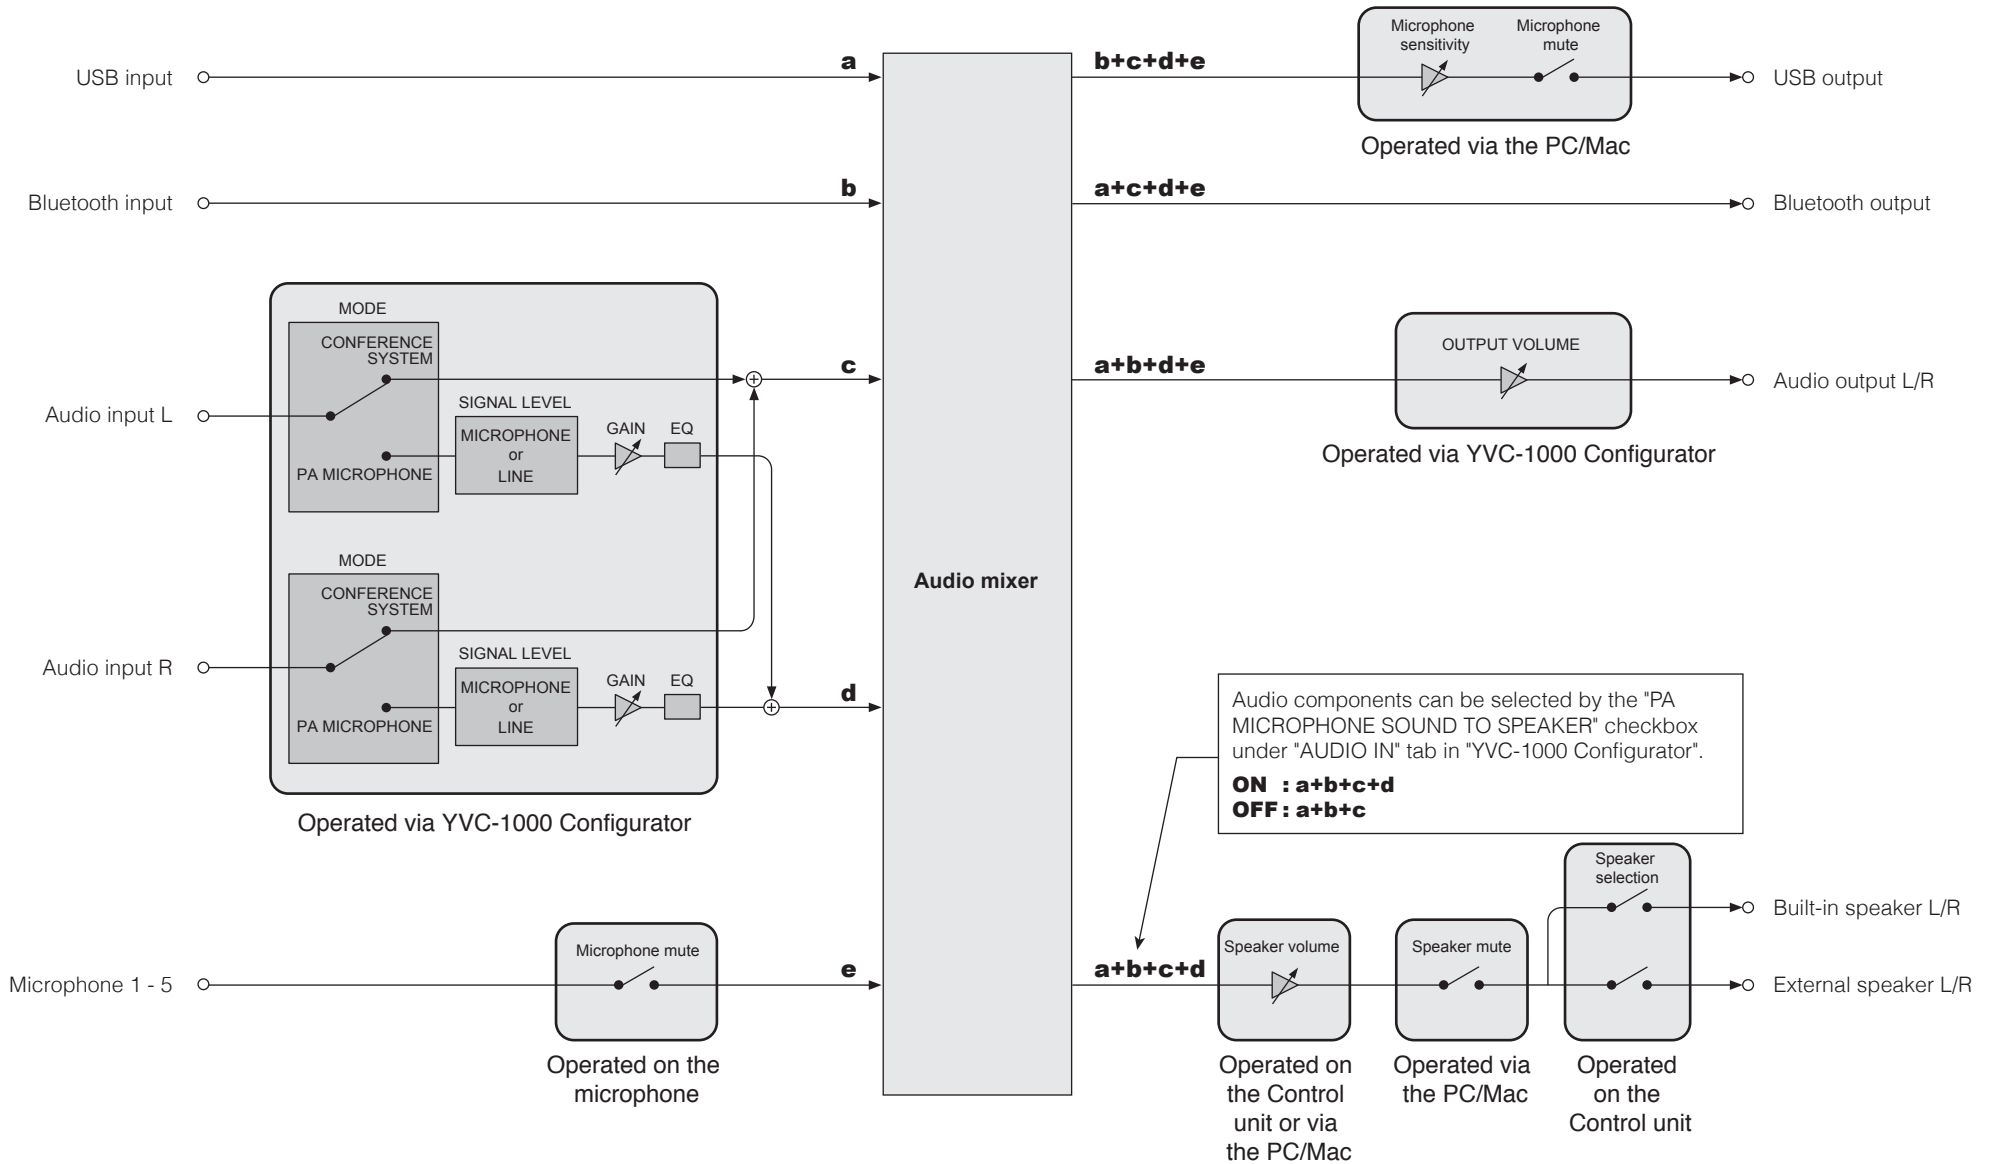

# YVC-1000 Block Diagram (Firmware Ver.2.00 to Ver.2.07)

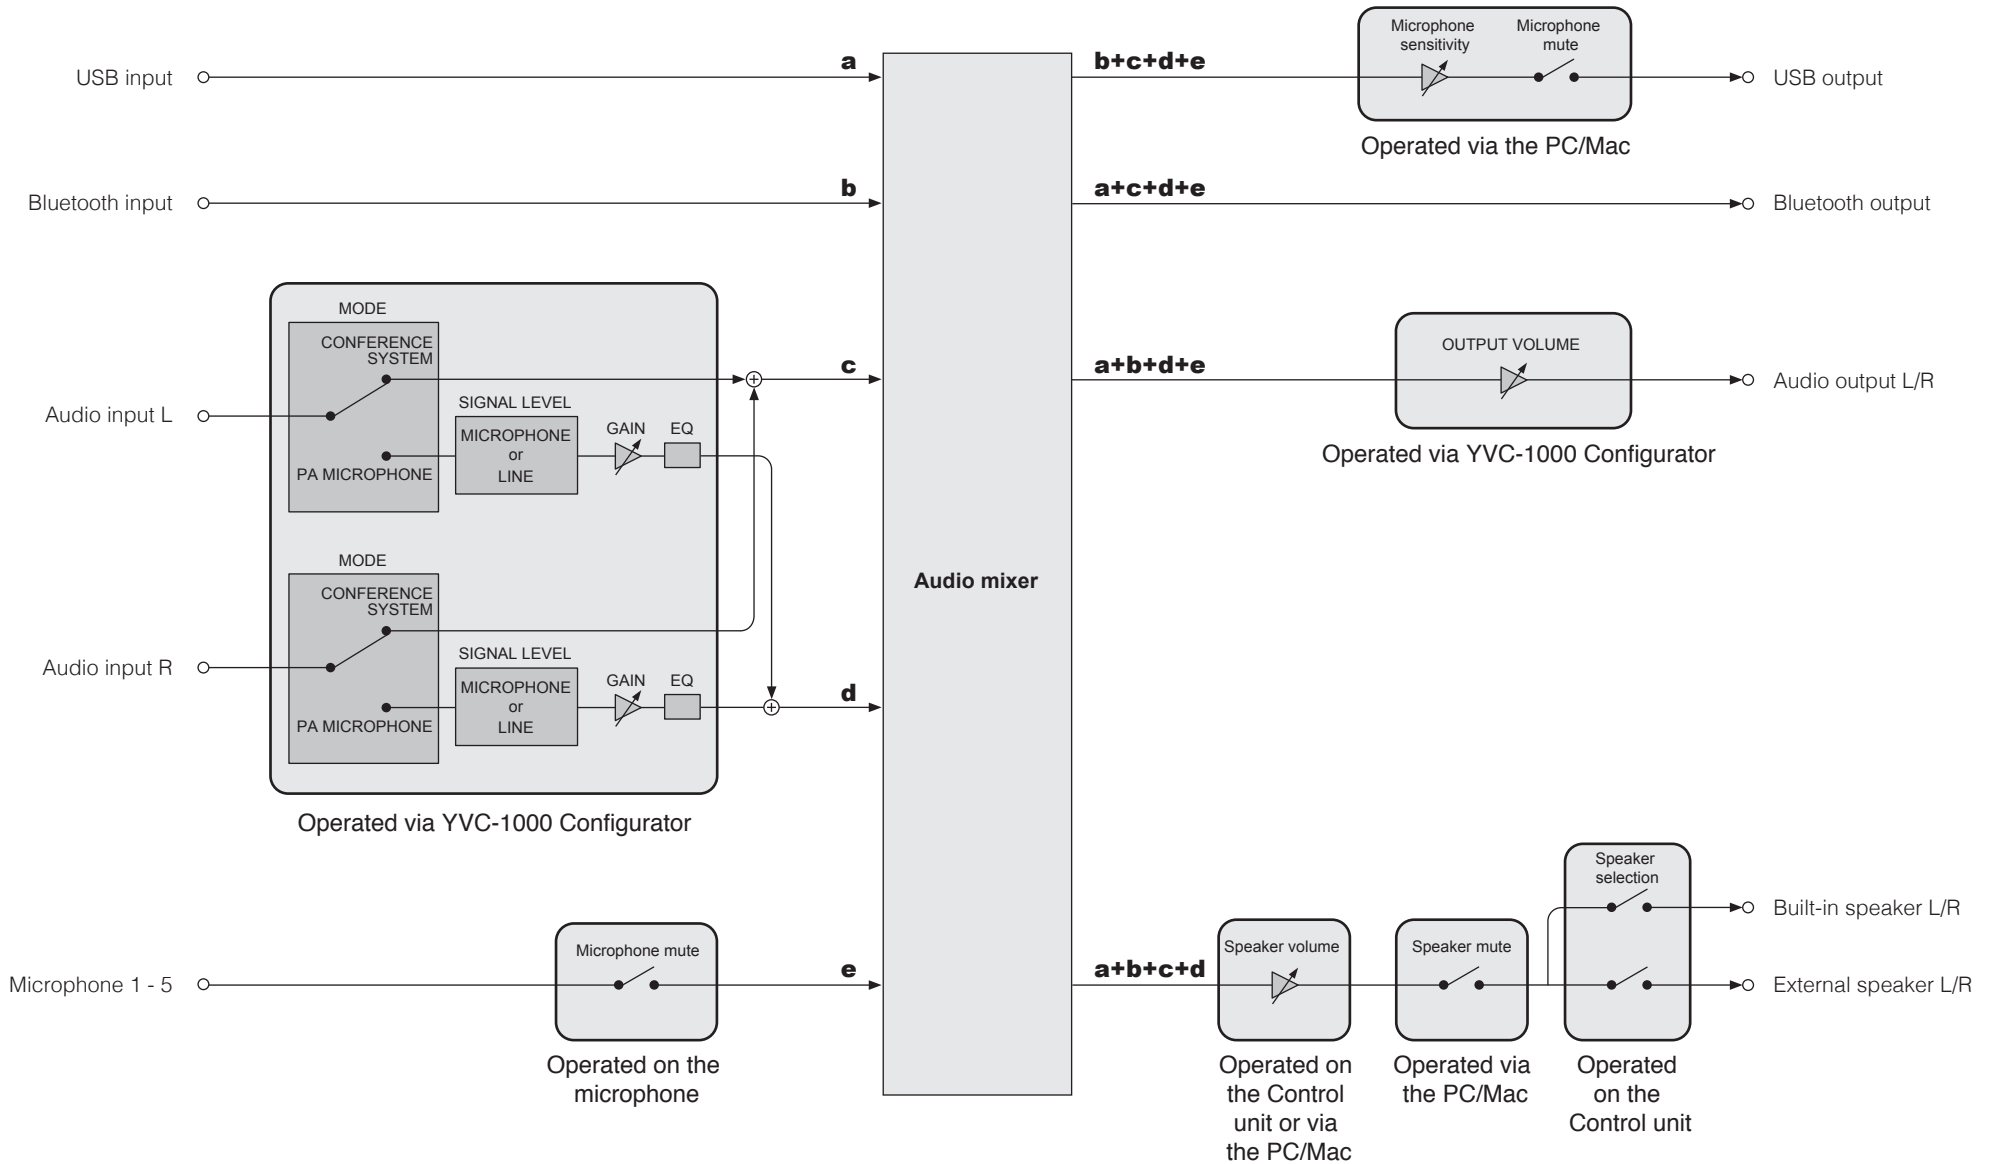

# YVC-1000 Block Diagram (Firmware Ver.1.05 or earlier)

