

Voice List / Voice-Liste / Liste des voix / Lista de voces / 音色一覽表

面板音色一覽表 Panel Voice List / Verzeichnis der Bedienfeld-Voices
Liste des voix de panneau / Lista de voces del panel

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
PIANO (鋼琴)				
1	0	113	1	Live! Grand Piano (現場平台鋼琴)
2	0	112	2	Live! Pop Grand (現場流行平台鋼琴)
3	0	114	1	Live! Warm Grand (現場溫暖平台鋼琴)
4	0	124	1	Ambient Grand Piano (氛圍平台鋼琴)
5	0	112	7	Harpsichord (大鍵琴)
6	0	112	4	Honky-tonk Piano (酒吧爵士鋼琴)
7	0	112	3	MIDI Grand Piano (MIDI 平台鋼琴)
8	0	113	3	CP 80 (CP80 電鋼琴)
E.PIANO (電鋼琴)				
9	0	114	5	Cool! Galaxy Electric Piano (超酷銀河電鋼琴)
10	0	118	5	Cool! Suitcase Electric Piano (超酷手提電鋼琴)
11	0	119	5	Cool! Electric Piano (超酷電鋼琴)
12	0	113	6	Hyper Tines (超級尖音電鋼琴)
13	0	120	5	Phase Electric Piano (相位效果電鋼琴)
14	0	112	5	Funky Electric Piano (放克電鋼琴)
15	0	112	6	DX Modern Electric Piano (DX現代電鋼琴)
16	0	114	6	Venus Electric Piano (維納斯電鋼琴)
17	0	113	5	Tremolo Electric Piano (顫音電鋼琴)
18	0	114	8	E.Clavichord (電子古鋼琴)
19	0	112	8	Clavi (古鋼琴)
20	0	113	8	Wah Clavi (哇音古鋼琴)
ORGAN (管風琴)				
21	0	118	19	Cool! Organ (超酷管風琴)
22	0	117	19	Cool! Rotor Organ (超酷旋轉管風琴)
23	0	112	17	Jazz Organ 1 (爵士管風琴 1)
24	0	113	17	Jazz Organ 2 (爵士管風琴 2)
25	0	112	19	Rock Organ (搖滾管風琴)
26	0	114	19	Purple Organ (紫色管風琴)
27	0	112	18	Click Organ (觸鍵管風琴)
28	0	116	17	Bright Organ (明亮管風琴)
29	0	127	19	Theater Organ (劇院管風琴)
30	0	121	20	16'+2' Organ (16 吋 +2 吋管風琴)
31	0	120	20	16'+4' Organ (16 吋 +4 吋管風琴)
32	0	113	20	Chapel Organ (小教堂管風琴)
33	0	112	20	Church Organ (教堂管風琴)
34	0	112	21	Reed Organ (簧風琴)
ACCORDION (手風琴)				
35	0	112	22	Musette Accordion (風笛舞手風琴)
36	0	113	22	Traditional Accordion (傳統手風琴)
37	0	113	24	Bandoneon (阿根廷手風琴)
38	0	113	23	Modern Harp (現代口琴)
39	0	112	23	Harmonica (口琴)
GUITAR (吉他)				
40	0	117	26	Steel Guitar (鋼絃吉他)
41	0	115	25	Classical Guitar (古典吉他)
42	0	112	25	Nylon Guitar (尼龍絃吉他)
43	0	112	26	Folk Guitar (民謠吉他)
44	0	115	27	Cool! Jazz Guitar (超酷爵士吉他)
45	0	112	27	Fusion Guitar (融合吉他)
46	0	117	28	60's Clean Guitar (60年代清音吉他)
47	0	113	26	12Strings Guitar (12 絃吉他)
48	0	112	28	Clean Guitar (清音吉他)
49	0	119	27	Blues Guitar (藍調吉他)
50	0	113	27	Octave Guitar (8 度音吉他)
51	0	112	29	Muted Guitar (悶音吉他)

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
52	0	112	30	Overdriven Guitar (超載電吉他)
53	0	112	31	Distortion Guitar (失真電吉他)
BASS (貝斯)				
54	0	114	34	Cool! Electric Bass (超酷電貝斯)
55	0	112	34	Finger Bass (指彈貝斯)
56	0	112	33	Acoustic Bass (原聲貝斯)
57	0	112	35	Pick Bass (撥片貝斯)
58	0	112	36	Fretless Bass (無琴格貝斯)
59	0	112	37	Slap Bass (擊絃貝斯)
60	0	112	39	Synth Bass (合成貝斯)
61	0	113	39	Hi-Q Bass (高頻貝斯)
62	0	113	40	Dance Bass (舞曲貝斯)
STRINGS (絃樂)				
63	0	117	50	Live! Strings (現場絃樂)
64	0	122	50	Live! Allegro (現場快板絃樂)
65	0	116	50	Live! Orchestra (現場管絃樂)
66	0	112	49	String Ensemble (絃樂團)
67	0	112	50	Chamber Strings (室內絃樂)
68	0	113	50	Slow Strings (慢起音絃樂)
69	0	112	45	Tremolo Strings (顫音絃樂)
70	0	115	50	Marcato Strings (強音絃樂)
71	0	112	51	Synth Strings (合成絃樂)
72	0	112	46	Pizzicato Strings (撥奏絃樂)
73	0	112	41	Violin (小提琴)
74	0	112	43	Cello (大提琴)
75	0	112	44	Contrabass (低音大提琴)
76	0	112	47	Harp (豎琴)
77	0	112	106	Banjo (斑鳩琴)
78	0	112	56	Orchestra Hit (管絃樂齊奏)
CHOIR (合唱)				
79	0	112	53	Choir (合唱)
80	0	113	53	Vocal Ensemble (室內合唱)
81	0	112	55	Air Choir (短歌合唱)
82	0	112	54	Vox Humana (人聲合唱)
SAXOPHONE (薩克斯風)				
83	0	117	67	Sweet! Tenor Sax (甜美次中音薩克斯風)
84	0	113	65	Sweet! Soprano Sax (甜美高音薩克斯風)
85	0	114	72	Sweet! Clarinet (甜美單簧管)
86	0	118	67	Growl Sax (咆哮薩克斯風)
87	0	112	67	Tenor Sax (次中音薩克斯風)
88	0	112	66	Alto Sax (中音薩克斯風)
89	0	112	65	Soprano Sax (高音薩克斯風)
90	0	112	68	Baritone Sax (上低音薩克斯風)
91	0	114	67	Breathy Tenor Sax (氣音次中音薩克斯風)
92	0	112	72	Clarinet (單簧管)
93	0	112	69	Oboe (雙簧管)
94	0	112	70	English Horn (英國管)
95	0	112	71	Bassoon (低音管)
TRUMPET (小號)				
96	0	115	57	Sweet! Trumpet (甜美小號)
97	0	117	58	Sweet! Trombone (甜美長號)
98	0	114	60	Sweet! Muted Trumpet (甜美弱音小號)
99	0	112	57	Trumpet (小號)
100	0	112	58	Trombone (長號)
101	0	113	58	Trombone Section (長號聲部)
102	0	112	60	Muted Trumpet (弱音小號)
103	0	112	61	French Horn (法國號)
104	0	112	59	Tuba (低音號)

音色一覽表 / Voice List / Voice-Liste / Liste des voix / Lista de voces

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
BRASS (銅管)				
105	0	118	63	Live! Hyper Brass (現場超級銅管)
106	0	117	63	Live! Pop Brass (現場流行銅管)
107	0	116	63	Live! Octave Brass (現場八度音銅管)
108	0	125	62	Sforzando (突強)
109	0	112	62	Brass Section (銅管聲部)
110	0	113	62	Big Band Brass (爵士大樂團銅管)
111	0	113	63	80's Brass (80年代銅管)
112	0	119	62	Mellow Horns (圓潤法國號)
113	0	114	63	Techno Brass (電子銅管)
114	0	112	63	Synth Brass (合成銅管)
FLUTE (長笛)				
115	0	114	74	Sweet! Flute (甜美長笛)
116	0	113	76	Sweet! Pan Flute (甜美排笛)
117	0	112	74	Flute (長笛)
118	0	112	73	Piccolo (短笛)
119	0	112	76	Pan Flute (排笛)
120	0	112	75	Recorder (直笛)
121	0	112	80	Ocarina (陶笛)
SYNTH LEAD (合成主奏)				
122	0	112	81	Square Lead (方波主奏)
123	0	112	82	Sawtooth Lead (鋸齒波主奏)
124	0	115	82	Analogon (類比)
125	0	119	82	Fargo (法哥)
126	0	112	99	Star Dust (星塵)
127	0	112	86	Voice Lead (人聲主奏)
128	0	112	101	Brightness (明亮)
SYNTH PAD (合成長音)				
129	0	118	89	SweetHeaven (甜美空靈)
130	0	112	92	Xenon Pad (氙氣長音)
131	0	112	95	Equinox (秋分)
132	0	112	89	Fantasia (幻想)
133	0	113	90	Dark Moon (暗月)
134	0	113	101	Bell Pad (鐘聲長音)
PERCUSSION (打擊樂器)				
135	0	112	12	Vibraphone (鐵琴)
136	0	112	13	Marimba (馬林巴木琴)
137	0	112	14	Xylophone (木琴)
138	0	112	115	Steel Drums (鋼鼓)
139	0	112	9	Celesta (鋼片琴)
140	0	112	11	Music Box (音樂盒)
141	0	112	15	Tubular Bells (管鐘)
142	0	112	48	Timpani (定音鼓)
DRUM KITS (鼓組)				
143	127	0	1	Standard Kit 1 (標準鼓組 1)
144	127	0	2	Standard Kit 2 (標準鼓組 2)
145	127	0	9	Room Kit (室內鼓組)
146	127	0	17	Rock Kit (搖滾鼓組)
147	127	0	25	Electronic Kit (電子鼓組)
148	127	0	26	Analog Kit (類比鼓組)
149	127	0	113	Dance Kit (舞曲鼓組)
150	127	0	33	Jazz Kit (爵士鼓組)
151	127	0	41	Brush Kit (鼓刷鼓組)
152	127	0	49	Symphony Kit (交響樂鼓組)
153	126	0	1	SFX Kit 1 (特效鼓組 1)
154	126	0	2	SFX Kit 2 (特效鼓組 2)

XGLite 音色一覽表 XGLite Voice List / Liste der XGLite-Voices
Liste des voix XGLite / Lista de voces de XGLite

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
XG PIANO (XG 鋼琴)				
155	0	0	1	Grand Piano (平台鋼琴)
156	0	1	1	Grand Piano KSP (平台鋼琴 KSP)
157	0	40	1	Piano Strings (鋼琴絃樂)
158	0	41	1	Dream (夢幻)
159	0	0	2	Bright Piano (亮音鋼琴)
160	0	1	2	Bright Piano KSP (亮音鋼琴 KSP)
161	0	0	3	Electric Grand Piano (電子平台鋼琴)
162	0	1	3	Electric Grand Piano KSP (電子平台鋼琴 KSP)
163	0	32	3	Detuned CP80 (音高微調 CP80 電鋼琴)
164	0	0	4	Honky-tonk Piano (酒吧爵士鋼琴)
165	0	1	4	Honky-tonk Piano KSP (酒吧爵士鋼琴 KSP)
166	0	0	5	Electric Piano 1 (電鋼琴 1)
167	0	1	5	Electric Piano 1 KSP (電鋼琴 1 KSP)
168	0	32	5	Chorus Electric Piano 1 (合奏電鋼琴 1)
169	0	0	6	Electric Piano 2 (電鋼琴 2)
170	0	1	6	Electric Piano 2 KSP (電鋼琴 2 KSP)
171	0	32	6	Chorus Electric Piano 2 (合奏電鋼琴 2)
172	0	41	6	DX+Analog Electric Piano (DX+類比電鋼琴)
173	0	0	7	Harpichord (大鍵琴)
174	0	1	7	Harpichord KSP (大鍵琴 KSP)
175	0	25	7	Harpichord 2 (大鍵琴 2)
176	0	35	7	Harpichord 3 (大鍵琴 3)
177	0	0	8	Clavi (古鋼琴)
178	0	1	8	Clavi KSP (古鋼琴 KSP)
XG ORGAN (XG 管風琴)				
179	0	0	9	Celesta (鋼片琴)
180	0	0	10	Glockenspiel (鐘琴)
181	0	0	11	Music Box (音樂盒)
182	0	64	11	Orgel (風琴)
183	0	0	12	Vibraphone (鐵琴)
184	0	1	12	Vibraphone KSP (鐵琴 KSP)
185	0	0	13	Marimba (馬林巴木琴)
186	0	1	13	Marimba KSP (馬林巴木琴 KSP)
187	0	64	13	Sine Marimba (正弦波馬林巴木琴)
188	0	97	13	Balimba (巴林巴琴)
189	0	98	13	Log Drums (木鼓)
190	0	0	14	Xylophone (木琴)
191	0	0	15	Tubular Bells (管鐘)
192	0	96	15	Church Bells (教堂鐘)
193	0	97	15	Carillon (排鐘)
194	0	0	16	Dulcimer (揚琴)
195	0	35	16	Dulcimer 2 (揚琴 2)
196	0	96	16	Cimbalom (匈牙利揚琴)
197	0	97	16	Santur (桑圖爾琴)
XG ORGAN (XG 管風琴)				
198	0	0	17	Drawbar Organ (音栓管風琴)
199	0	32	17	Detuned Drawbar Organ (音高微調音栓管風琴)
200	0	33	17	60's Drawbar Organ 1 (60年代音栓管風琴 1)
201	0	34	17	60's Drawbar Organ 2 (60年代音栓管風琴 2)
202	0	35	17	70's Drawbar Organ 1 (70年代音栓管風琴 1)
203	0	37	17	60's Drawbar Organ 3 (60年代音栓管風琴 3)
204	0	40	17	16+2'2/3 (16+2 吋 2/3)
205	0	64	17	Organ Bass (管風琴低音)
206	0	65	17	70's Drawbar Organ 2 (70年代音栓管風琴 2)
207	0	66	17	Cheezzy Organ (庸俗管風琴)

Voice List / Voice-Liste / Liste des voix / Lista de voces / 音色一覽表

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
208	0	67	17	Drawbar Organ 2 (音栓管風琴 2)
209	0	0	18	Percussive Organ (打擊管風琴)
210	0	24	18	70's Percussive Organ (70 年代打擊管風琴)
211	0	32	18	Detuned Percussive Organ (音高微調打擊管風琴)
212	0	33	18	Light Organ (輕柔管風琴)
213	0	37	18	Percussive Organ 2 (打擊管風琴 2)
214	0	0	19	Rock Organ (搖滾管風琴)
215	0	64	19	Rotary Organ (旋轉管風琴)
216	0	65	19	Slow Rotary (慢速旋轉)
217	0	66	19	Fast Rotary (快速旋轉)
218	0	0	20	Church Organ (教堂管風琴)
219	0	32	20	Church Organ 3 (教堂管風琴 3)
220	0	35	20	Church Organ 2 (教堂管風琴 2)
221	0	40	20	Notre Dame (聖母瑪麗亞)
222	0	64	20	Organ Flute (管風琴風管)
223	0	65	20	Tremolo Organ Flute (顫音管風琴風管)
224	0	0	21	Reed Organ (簧風琴)
225	0	40	21	Puff Organ (吹氣管風琴)
226	0	0	22	Accordion (手風琴)
227	0	0	23	Harmonica (口琴)
228	0	32	23	Harmonica 2 (口琴 2)
229	0	0	24	Tango Accordion (探戈手風琴)
230	0	64	24	Tango Accordion 2 (探戈手風琴 2)
XG GUITAR (XG 吉他)				
231	0	0	25	Nylon Guitar (尼龍絃吉他)
232	0	16	25	Nylon Guitar 2 (尼龍絃吉他 2)
233	0	43	25	Velocity Guitar Harmonics (力度吉他和聲)
234	0	96	25	Ukulele (烏克里里)
235	0	0	26	Steel Guitar (鋼絃吉他)
236	0	35	26	12-string Guitar (12 絃吉他)
237	0	40	26	Nylon & Steel Guitar (尼龍絃與鋼絃吉他)
238	0	41	26	Steel Guitar with Body Sound (鋼絃吉他和打板聲)
239	0	96	26	Mandolin (曼陀林琴)
240	0	0	27	Jazz Guitar (爵士吉他)
241	0	32	27	Jazz Amp (爵士音箱)
242	0	0	28	Clean Guitar (清音吉他)
243	0	32	28	Chorus Guitar (合奏吉他)
244	0	0	29	Muted Guitar (悶音吉他)
245	0	40	29	Funk Guitar (放克吉他)
246	0	41	29	Muted Steel Guitar (悶音鋼絃吉他)
247	0	45	29	Jazz Man (爵士樂手)
248	0	0	30	Overdriven Guitar (超載電吉他)
249	0	43	30	Guitar Pinch (電吉他和捏式泛音)
250	0	0	31	Distortion Guitar (失真電吉他)
251	0	40	31	Feedback Guitar (回授電吉他)
252	0	41	31	Feedback Guitar 2 (回授電吉他 2)
253	0	0	32	Guitar Harmonics (吉他和聲)
254	0	65	32	Guitar Feedback (電吉他和回授)
255	0	66	32	Guitar Harmonics 2 (吉他和聲 2)
XG BASS (XG 貝斯)				
256	0	0	33	Acoustic Bass (原聲貝斯)
257	0	40	33	Jazz Rhythm (爵士韻律)
258	0	45	33	Velocity Crossfade Upright Bass (力度交叉淡化直立式貝斯)
259	0	0	34	Finger Bass (指彈貝斯)
260	0	18	34	Finger Dark (指彈深沉)
261	0	40	34	Bass & Distorted Electric Guitar (貝斯和失真電吉他)
262	0	43	34	Finger Slap Bass (指彈擊絃貝斯)
263	0	45	34	Finger Bass 2 (指彈貝斯 2)

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
264	0	65	34	Modulated Bass (調變貝斯)
265	0	0	35	Pick Bass (撥片貝斯)
266	0	28	35	Muted Pick Bass (悶音撥片貝斯)
267	0	0	36	Fretless Bass (無琴格貝斯)
268	0	32	36	Fretless Bass 2 (無琴格貝斯 2)
269	0	33	36	Fretless Bass 3 (無琴格貝斯 3)
270	0	34	36	Fretless Bass 4 (無琴格貝斯 4)
271	0	0	37	Slap Bass 1 (擊絃貝斯 1)
272	0	32	37	Punch Thumb Bass (拇指彈撥貝斯)
273	0	0	38	Slap Bass 2 (擊絃貝斯 2)
274	0	43	38	Velocity Switch Slap (力度切換擊絃)
275	0	0	39	Synth Bass 1 (合成貝斯 1)
276	0	20	39	FastResoBass (快速共振貝斯)
277	0	40	39	Techno Synth Bass (電子合成貝斯)
278	0	96	39	Hammer (打絃貝斯)
279	0	0	40	Synth Bass 2 (合成貝斯 2)
280	0	6	40	Mellow Synth Bass (圓潤合成貝斯)
281	0	12	40	Sequenced Bass (編曲機貝斯)
282	0	18	40	Click Synth Bass (短促合成貝斯)
283	0	19	40	Synth Bass 2 Dark (合成貝斯 2 深沉)
284	0	40	40	Modular Synth Bass (模組合成貝斯)
285	0	41	40	DX Bass (DX 貝斯)
XG STRINGS (XG 絃樂)				
286	0	0	41	Violin (小提琴)
287	0	8	41	Slow Violin (慢起音小提琴)
288	0	0	42	Viola (中提琴)
289	0	0	43	Cello (大提琴)
290	0	0	44	Contrabass (低音大提琴)
291	0	0	45	Tremolo Strings (顫音絃樂)
292	0	8	45	Slow Tremolo Strings (慢起音顫音絃樂)
293	0	40	45	Suspense Strings (懸疑絃樂)
294	0	0	46	Pizzicato Strings (撥奏絃樂)
295	0	0	47	Orchestral Harp (管絃樂豎琴)
296	0	40	47	Yang Chin (揚琴)
297	0	0	48	Timpani (定音鼓)
XG ENSEMBLE (XG 合奏)				
298	0	0	49	Strings 1 (絃樂 1)
299	0	3	49	Stereo Strings (立體聲絃樂)
300	0	8	49	Slow Strings (慢起音絃樂)
301	0	35	49	60's Strings (60 年代絃樂)
302	0	40	49	Orchestra (管絃樂)
303	0	41	49	Orchestra 2 (管絃樂 2)
304	0	42	49	Tremolo Orchestra (顫音管絃樂)
305	0	45	49	Velocity Strings (力度絃樂)
306	0	0	50	Strings 2 (絃樂 2)
307	0	3	50	Stereo Slow Strings (立體聲慢起音絃樂)
308	0	8	50	Legato Strings (連弓絃樂)
309	0	40	50	Warm Strings (溫暖絃樂)
310	0	41	50	Kingdom (王國)
311	0	0	51	Synth Strings 1 (合成絃樂 1)
312	0	65	51	Synth Strings 5 (合成絃樂 5)
313	0	0	52	Synth Strings 2 (合成絃樂 2)
314	0	0	53	Choir Aahs (合唱啊聲)
315	0	3	53	Stereo Choir (立體聲合唱)
316	0	32	53	Mellow Choir (圓潤合唱)
317	0	40	53	Choir Strings (合奏絃樂)
318	0	0	54	Voice Oohs (人聲嗚聲)
319	0	0	55	Synth Voice (成人人聲)

音色一覽表 / Voice List / Voice-Liste / Liste des voix / Lista de voces

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
320	0	40	55	Synth Voice 2 (合成成人聲 2)
321	0	41	55	Choral (合唱)
322	0	64	55	Analog Voice (類比人聲)
323	0	0	56	Orchestra Hit (管絃樂齊奏)
324	0	35	56	Orchestra Hit 2 (管絃樂齊奏 2)
325	0	64	56	Impact (強力齊奏)
XG BRASS (XG 銅管)				
326	0	0	57	Trumpet (小號)
327	0	32	57	Warm Trumpet (溫暖小號)
328	0	0	58	Trombone (長號)
329	0	18	58	Trombone 2 (長號 2)
330	0	0	59	Tuba (低音號)
331	0	0	60	Muted Trumpet (弱音小號)
332	0	0	61	French Horn (法國號)
333	0	6	61	French Horn Solo (法國號獨奏)
334	0	32	61	French Horn 2 (法國號 2)
335	0	37	61	Horn Orchestra (法國號管絃樂)
336	0	0	62	Brass Section (銅管聲部)
337	0	35	62	Trumpet & Trombone Section (小號和長號聲部)
338	0	0	63	Synth Brass 1 (合成銅管 1)
339	0	20	63	Resonant Synth Brass (共鳴合成銅管)
340	0	32	63	Jump Brass (跳音銅管)
341	0	0	64	Synth Brass 2 (合成銅管 2)
342	0	18	64	Soft Brass (輕柔銅管)
343	0	41	64	Choir Brass (合奏銅管)
344	0	45	64	Analog Velocity Brass 2 (類比力度銅管 2)
XG REED (XG 簧片管樂)				
345	0	0	65	Soprano Sax (高音薩克斯風)
346	0	0	66	Alto Sax (中音薩克斯風)
347	0	40	66	Sax Section (薩克斯風聲部)
348	0	0	67	Tenor Sax (次中音薩克斯風)
349	0	40	67	Breathy Tenor Sax (氣音次中音薩克斯風)
350	0	0	68	Baritone Sax (上低音薩克斯風)
351	0	0	69	Oboe (雙簧管)
352	0	0	70	English Horn (英國號)
353	0	0	71	Bassoon (低音管)
354	0	0	72	Clarinet (單簧管)
XG PIPE (XG 吹管樂器)				
355	0	0	73	Piccolo (短笛)
356	0	0	74	Flute (長笛)
357	0	0	75	Recorder (直笛)
358	0	0	76	Pan Flute (排笛)
359	0	0	77	Blown Bottle (吹瓶)
360	0	0	78	Shakuhachi (尺八)
361	0	0	79	Whistle (口哨)
362	0	0	80	Ocarina (陶笛)
XG SYNTH LEAD (XG 合成主奏)				
363	0	0	81	Square Lead (方波主奏)
364	0	6	81	Square Lead 2 (方波主奏 2)
365	0	8	81	LM Square (LM 方波)
366	0	18	81	Hollow (空洞音)
367	0	19	81	Shroud (籠罩音)
368	0	64	81	Mellow (柔和音)
369	0	65	81	Solo Sine (正弦波獨奏)
370	0	66	81	Sine Lead (正弦波主奏)
371	0	0	82	Sawtooth Lead (鋸齒波主奏)
372	0	6	82	Sawtooth Lead 2 (鋸齒波主奏 2)
373	0	8	82	Thick Sawtooth (渾厚鋸齒波)

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
374	0	18	82	Dynamic Sawtooth (動態鋸齒波)
375	0	19	82	Digital Sawtooth (數位鋸齒波)
376	0	20	82	Big Lead (大主奏)
377	0	25	82	Waspy Synth (似黃蜂合成)
378	0	41	82	Dr. Lead (鼓主奏)
379	0	96	82	Sequenced Analog (編曲機類比)
380	0	0	83	Calliope Lead (汽笛風琴主奏)
381	0	65	83	Pure Lead (純主奏)
382	0	0	84	Chiff Lead (吸氣音主奏)
383	0	0	85	Charang Lead (十絃琴主奏)
384	0	64	85	Distorted Lead (失真主奏)
385	0	0	86	Voice Lead (人聲主奏)
386	0	0	87	Fifths Lead (五度音主奏)
387	0	35	87	Big Five (大五度)
388	0	0	88	Bass & Lead (低音和主音)
389	0	16	88	Big & Low (高音和低音)
390	0	64	88	Fat & Perky (寬厚和活潑)
391	0	65	88	Soft Whirl (輕柔旋轉)
XG SYNTH PAD (XG 合成長音)				
392	0	0	89	New Age Pad (新世紀長音)
393	0	64	89	Fantasy (幻想)
394	0	0	90	Warm Pad (溫暖長音)
395	0	18	90	Sine Pad (正弦波長音)
396	0	0	91	Poly Synth Pad (多聲部合成長音)
397	0	0	92	Choir Pad (合唱長音)
398	0	64	92	Heaven (空靈)
399	0	66	92	Utopia (伊托比亞)
400	0	0	93	Bowed Pad (拉奏長音)
401	0	0	94	Metallic Pad (金屬長音)
402	0	65	94	Pan Pad (左右相位長音)
403	0	0	95	Halo Pad (光環長音)
404	0	0	96	Sweep Pad (掠過長音)
XG SYNTH EFFECTS (XG 合成效果)				
405	0	0	97	Rain (雨)
406	0	65	97	African Wind (非洲風)
407	0	66	97	Carib (加勒比)
408	0	0	98	Sound Track (配樂)
409	0	27	98	Prologue (序幕)
410	0	0	99	Crystal (水晶)
411	0	12	99	Synth Drum Comp (合成鼓比賽)
412	0	14	99	Popcorn (爆米花)
413	0	18	99	Tiny Bells (小鈴)
414	0	35	99	Round Glockenspiel (圓潤鐘琴)
415	0	40	99	Glockenspiel Chimes (鐘琴聲)
416	0	41	99	Clear Bells (清澈鐘聲)
417	0	42	99	Chorus Bells (合奏鐘聲)
418	0	65	99	Soft Crystal (柔和水晶)
419	0	66	99	LoudGlocken (響亮鐘琴)
420	0	68	99	VibeBells (振動鐘聲)
421	0	70	99	Air Bells (悠揚鐘聲)
422	0	71	99	Bell Harp (鐘形豎琴)
423	0	72	99	Gamelimba (木琴)
424	0	0	100	Atmosphere (大氣)
425	0	18	100	Warm Atmosphere (溫暖的大氣)
426	0	19	100	Hollow Release (空洞釋放)
427	0	40	100	Nylon Electric Piano (尼龍絃電鋼琴)
428	0	64	100	Nylon Harp (尼龍絃豎琴)
429	0	65	100	Harp Vox (豎琴聲)

Voice List / Voice-Liste / Liste des voix / Lista de voces / 音色一覽表

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
430	0	66	100	Atmosphere Pad (大氣長音)
431	0	0	101	Brightness (明亮)
432	0	96	101	Smokey (煙霧)
433	0	0	102	Goblins (妖精)
434	0	64	102	Goblins Synth (妖精合成)
435	0	65	102	Creeper (旋木雀)
436	0	67	102	Ritual (宗教儀式)
437	0	68	102	To Heaven (上天堂)
438	0	70	102	Night (夜晚)
439	0	71	102	Glisten (閃光)
440	0	96	102	Bell Choir (鐘聲合奏)
441	0	0	103	Echoes (回聲)
442	0	8	103	Echoes 2 (回聲 2)
443	0	64	103	EchoBells (回響鐘聲)
444	0	67	103	Creation (天地)
445	0	69	103	Reso&Panning (共鳴和左右相位)
446	0	0	104	Sci-Fi (科幻)
XG WORLD (XG 世界民族樂器)				
447	0	0	105	Sitar (西塔琴)
448	0	32	105	Detuned Sitar (音高微調西塔琴)
449	0	35	105	Sitar 2 (西塔琴 2)
450	0	97	105	Tamboura (塔布拉琴)
451	0	0	106	Banjo (斑鳩琴)
452	0	28	106	Muted Banjo (悶音斑鳩琴)
453	0	96	106	Rabab (拉巴琴)
454	0	97	106	Gopichant (單絃琴)
455	0	98	106	Oud (烏德琴)
456	0	0	107	Shamisen (三味線)
457	0	0	108	Koto (日本箏)
458	0	96	108	Taisho-kin (日本大正琴)
459	0	97	108	Kanoon (卡農琴)
460	0	0	109	Kalimba (卡林巴琴)
461	0	0	110	Bagpipe (風笛)
462	0	0	111	Fiddle (小提琴)
463	0	0	112	Shanai (印度嗩吶)
464	0	97	112	Hichiriki (簫)
XG PERCUSSIVE (XG 打擊樂器)				
465	0	0	113	Tinkle Bell (叮噹鈴)
466	0	96	113	Bonang (銅鼓)
467	0	97	113	Altair (河鼓)
468	0	98	113	Gamelan Gongs (甘美朗鑼)
469	0	99	113	Stereo Gamelan Gongs (立體聲甘美朗鑼)
470	0	100	113	Rama Cymbal (喇嘛鈸)
471	0	0	114	Agogo (阿哥哥牛鈴)
472	0	0	115	Steel Drums (鋼鼓)
473	0	97	115	Glass Percussion (玻璃打擊樂)
474	0	98	115	Thai Bells (泰國鐘)
475	0	0	116	Woodblock (木魚)
476	0	96	116	Castanets (響板)
477	0	0	117	Taiko Drum (太鼓)
478	0	96	117	Gran Cassa (大鼓)
479	0	0	118	Melodic Tom (中音鼓)
480	0	64	118	Melodic Tom 2 (中音鼓 2)
481	0	65	118	Real Tom (真正中音鼓)
482	0	66	118	Rock Tom (搖滾中音鼓)
483	0	0	119	Synth Drum (合成鼓)
484	0	64	119	Analog Tom (類比中音鼓)
485	0	65	119	Electronic Percussion (電子打擊樂)

音色 編號	群組選擇		MIDI 音色切換 #(1-128)	音色名稱
	MSB (0-127)	LSB (0-127)		
486	0	0	120	Reverse Cymbal (迴音鈸)
XG SOUND EFFECTS (XG 音效)				
487	0	0	121	Fret Noise (吉他換把聲)
488	0	0	122	Breath Noise (呼吸聲)
489	0	0	123	Seashore (海岸)
490	0	0	124	Bird Tweet (鳥鳴聲)
491	0	0	125	Telephone Ring (電話鈴聲)
492	0	0	126	Helicopter (直升機)
493	0	0	127	Applause (掌聲)
494	0	0	128	Gunshot (槍聲)
495	64	0	1	Cutting Noise (切割聲)
496	64	0	2	Cutting Noise 2 (切割聲 2)
497	64	0	4	String Slap (擊絃)
498	64	0	17	Flute Key Click (長笛按鍵聲)
499	64	0	33	Shower (陣雨聲)
500	64	0	34	Thunder (雷鳴聲)
501	64	0	35	Wind (風聲)
502	64	0	36	Stream (溪流聲)
503	64	0	37	Bubble (冒泡聲)
504	64	0	38	Feed (餵食聲)
505	64	0	49	Dog (狗叫聲)
506	64	0	50	Horse (馬叫聲)
507	64	0	51	Bird Tweet 2 (鳥鳴聲 2)
508	64	0	56	Maou (牛叫聲)
509	64	0	65	Phone Call (打電話)
510	64	0	66	Door Squeak (門軸吱嘎聲)
511	64	0	67	Door Slam (摔門聲)
512	64	0	68	Scratch Cut (刮擦聲)
513	64	0	69	Scratch Split (劈裂聲)
514	64	0	70	Wind Chime (風鈴聲)
515	64	0	71	Telephone Ring 2 (電話鈴聲 2)
516	64	0	81	Car Engine Ignition (發動汽車)
517	64	0	82	Car Tires Squeal (煞車聲)
518	64	0	83	Car Passing (汽車經過)
519	64	0	84	Car Crash (撞車聲)
520	64	0	85	Siren (警報聲)
521	64	0	86	Train (火車)
522	64	0	87	Jet Plane (噴射機)
523	64	0	88	Starship (太空船)
524	64	0	89	Burst (爆炸聲)
525	64	0	90	Roller Coaster (雲霄飛車)
526	64	0	91	Submarine (潛水艇)
527	64	0	97	Laugh (笑聲)
528	64	0	98	Scream (尖叫聲)
529	64	0	99	Punch (拳聲)
530	64	0	100	Heartbeat (心跳聲)
531	64	0	101	Footsteps (腳步聲)
532	64	0	113	Machine Gun (機關槍)
533	64	0	114	Laser Gun (雷射槍)
534	64	0	115	Explosion (爆破聲)
535	64	0	116	Firework (煙火)